

Operating Instructions including panel reset

Step 1: Insert the 12v lead into a power supply, the LED panel should now be BLUE

Step 2: Press and hold the “SET” button (middle one of the 3), until you see this screen.



Step 3: Adjust the display to the required pressure.

Step 4: Press and hold the “SET” button until the numbers disappear from the display.

Step 5: After the numbers disappear from the display, release the “SET” button. At this point your desired pressure should blink on the screen 3 times before the dial displays “0.0”

Step 6: When the dial displays “0.0” turn on the inflator.