

Thank you for purchasing an "Outdoor Revolution" product;  
this product will give years of satisfactory service if basic  
instructions are followed. Our products are designed for du-  
rability and ease of erection.



[WWW.OUTDOOR-REVOLUTION.COM](http://WWW.OUTDOOR-REVOLUTION.COM)

UNIT 1 BRICK PARK  
BRETFIELD COURT  
BRETTON STREET INDUSTRIAL ESTATE  
DEWSBURY  
WEST YORKSHIRE  
WF12 9BY



**OUTDOOR  
REVOLUTION**  
[WWW.OUTDOOR-REVOLUTION.COM](http://WWW.OUTDOOR-REVOLUTION.COM)

# Sportline Canopi

## Instructions & Care Manual



**OUTDOOR  
REVOLUTION**  
[WWW.OUTDOOR-REVOLUTION.COM](http://WWW.OUTDOOR-REVOLUTION.COM)

## IMPORTANT: PLEASE CHECK YOUR EQUIPMENT

1 x 180HDE Flysheet (Or Outer)

1 x Bag of Steel Pegs

## 1 x Adjustable Steel Pole

## 1 x 6mm x 4mm Twin Piping


1 x Holdall

## 2 x Endurance Storm Straps



SPORT-LINE CANOPI

Outer front Height;175CM

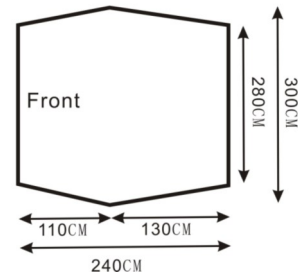

We highly recommend that you insure your canopy against storm damage or accidental damage, as the warranty does not cover such eventualities. The manufacturer is not liable for any damage caused to the canopy or its contents because of misuse, incorrect pitching or extreme weather (full warranty details are at the back of this booklet).

## NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

- Damage caused by incorrect maintenance of the product.
- Flaws in the fabric caused by excessive use.
- Imperfections and pulls in mesh doors due to wear and tear.
- Water ingress through fabric as a result of accelerated UV degradation due to long term pitch .
- Water ingress through seams caused by excessive abrasion of seams or taped seam.
- Broken zips caused by over tensioning, forcing or snagging.
- Over tensioned/stretched seams coming apart.
- Buckles subjected to undue force or abrasion.
- Lost/popped out eyelets.
- Broken holdalls.
- Pole breakages or tube punctures (where applicable).
- Collateral damage from a pole breakage.
- Condensation, (a natural occurrence, exacerbated by insufficient ventilation opening).
- Consequential damage/loss to property/belongings (either inside or outside of the product) or shortening of holidays.

Outdoor Revolution work very closely with our retail partners to manage all warranty repairs/issues:

Please contact your retailer immediately (even if purchased online) if you feel your Outdoor Revolution product has a genuine warranty issue. The retailer, in turn will raise the issue with ourselves and we will action; with the retailer, according to the nature of the claim.

### **Returning Products**

Please ensure the product is clean and dry and as close to its original condition as possible before sending back for checking. Wet or dirty products will not be accepted back for checking/warranty claims.

It is important to note that the Sales Contract between yourself and the retailer you purchased the Outdoor Revolution product from, remains valid throughout any warranty claim and your statutory rights are not affected.

## **IMPORTANT INFORMATION**

- ◆ Please do not leave for your holiday without fully erecting and checking you have all the contents for your canopy; if you're missing anything, please contact your retailer immediately before use.
- ◆ Please also note that man-made fabrics are prone to condensation when the warm air and moisture inside the canopy comes into contact with the colder air on the outside of the canopy fabric. This is a perfectly natural occurrence and should not be confused with leaking. Ensure all ventilation points are open whenever possible to help combat condensation.
- ◆ Ideally, erect your canopy for some period before use - allowing it to weather. 'Weathering' can take a few uses of the canopy before it becomes fully effective. Seam sealant can be used to solve any persistent weeps; this process is completely normal. 'Weathering' is the process of allowing your canvas product get wet, then dry approximately two to three times in order to strengthen and further waterproof the seams and stitching on the fabric.
- ◆ Make sure that before erecting, you site the canopy on clear level ground, with no sharp objects underneath and zips fully closed. (We recommend laying a ground-sheet down to keep the canopy dry and clean).
- ◆ We suggest conducting a trial run of your canopy to familiarise yourself with the set up and use of the canopy. If you have any issues relating to pitching your canopy, please contact your dealer for assistance before going on holiday.
- ◆ Please note this canopy is designed for 'touring' and not for permanent pitch.
- ◆ After use, always dry and air the canopy before packing away to prevent mildew or mould.
- ◆ Any dirt or stains can be removed by brushing or gently washing with warm water. DO NOT use detergents, as this will destroy the waterproofing on the fabrics.
- ◆ DO NOT cook or smoke in this canopy; although the outer fabric is flame retardant treated, it will still melt.
- ◆ In the event of damage; please contact your retailer. If for whatever reason you are unable to contact them, please email: [cs@blue-diamond-products.co.uk](mailto:cs@blue-diamond-products.co.uk) and our customer service team will be happy to help!
- ◆ Please avoid using this canopy in temperatures below freezing, as this can result in cracking of the air-frame.
- ◆ DO NOT use bleach to clean your canopy under any circumstances.



## PLEASE READ THE FOLLOWING ERECTION INSTRUCTIONS CAREFULLY

**TIP:** Refer to the photographs to help when pitching your 'Sportline Canopi'.

1. Spread out the flysheet on the ground, with the long zip laid near the front of your already pitched tent.



2. Attach the canopy to your vehicle using the twin piping (4mm x 6mm).

3. Locate the steel pole and assemble all of the pieces together.

4. Next, thread the pole through the sleeve and insert the metal pin from the ring, pinning it into the bottom of the pole on both sides.



## OUTDOOR REVOLUTION GUARANTEE

Outdoor Revolution products are designed and produced to the highest manufacturing standards. The best quality fabrics and components available are used for each specific item and rigorous checking of finished products is in place.

All finished products are:-

- Checked for and are free of minor defects
- Are fit for the purpose/use that they are intended
- Are of a satisfactory quality

It is important that correct care is taken when opening the product, erecting, using and just as importantly, packing away the product. Following these rules will keep your product in reliable working condition for many years. Failure to adhere to these simple guideline may cause unnecessary damage to the product (see formal instructions for hints and tips on handling/erecting the product). A repair kit is included in the product to help resolve any minor issues.

## THE WARRANTY

The Outdoor Revolution Warranty lasts for 12 months from the original date of purchase (please keep all receipts or copies of any relevant transaction to substantiate the purchase date). The warranty only covers workmanship and fabric/ components. Any faults found within 6 months of purchase will be investigated by Outdoor Revolution. Faults found outside of the initial six months of purchase will need to be proven by you the purchaser, in line with current consumer legislation after the short term right to reject has ended.

Retailer will not refund a purchase if no fault is found.

The manufactures warranty does not cover the following:-

- General wear and tear over extended periods of use or, seasonal pitching of the product.
- Accelerated UV damage caused by excessive, long term sun exposure.
- Accidental damage caused by but not exclusive to, human, animal or weather.

# PACKING AWAY YOUR CANOPY

- ⇒ Remove the metal pin from the bottom of the pole and thread the pole out the sleeve.
- ⇒ Disassemble the pole and put it back into the respective bag.
- ⇒ Unpeg any guylines/storm straps and tie them up.
- ⇒ Unthread the canopy from the vehicle.
- ⇒ Roll canvas up into long, thin sausage shape with other components inside.
- ⇒ Remove any final pegs.



- ⇒ Fold the canopy lengthways to make a long, thin sausage shape.

- ⇒ Measure the width of the bag up against the width of the folded canopy to make sure the tent is going to fit.



- ⇒ Begin to roll the canopy as tight as possible towards the bag.



- ⇒ Place the rolled canopy onto the bag and pull the sides up around it. Finally, zip-up the bag.

- 5. Clip all of the black plastic 'c' clips onto the pole, at either side, for additional stability.



- 6. Peg out and tension the canopy; use the adjustable pegging straps to tension it as you desire. Make sure you don't over-tension the fabric. If a door zip is too tight, release some tension before closing; never force the zip.

- 7. Peg out all remaining pegging points and guy lines, starting from one corner and working your way around.



- 8. Finally, peg out the '**Endurance Storm Straps**' for extra stability. Please make sure that in heavier weather, you use all guylines and storm straps provided to hold the canopy in position.