

Thank you for purchasing an Outdoor Revolution product.  
This product will give years of satisfactory service if basic instructions are followed. Our products are designed for durability and ease of erection.



[WWW.OUTDOOR-REVOLUTION.COM](http://WWW.OUTDOOR-REVOLUTION.COM)

UNIT 1 BRICK PARK  
BRETFIELD COURT  
BRETTON STREET INDUSTRIAL ESTATE  
DEWSBURY  
WEST YORKSHIRE  
WF12 9BY

In the interest of continuous development and improvements by Outdoor Revolution; some products or specifications may vary slightly from the photographs and information provided in this instruction manual. Dimensions and weights are approximate and intended as a guidelines only.



**OUTDOOR  
REVOLUTION**  
WWW.OUTDOOR-REVOLUTION.COM

## TURISMO XLS<sup>2</sup>

### INSTRUCTIONS & CARE MANUAL



**OUTDOOR  
REVOLUTION**  
WWW.OUTDOOR-REVOLUTION.COM

## IMPORTANT: PLEASE CHECK YOUR EQUIPMENT

1 x 100HDE FLYSHEET (OR OUTER)

### 3 X FIBREGLASS POLES

1 X BAG OF STEEL GROUND PEGS

1 x REPAIR KIT

1 x HOLDALL

1 X SEPARATE GROUNDSHEET

1 x TWO BERTH INNER TENT

## STORM STRAP ATTACHMENT POINTS


# GUYLINES

Turismo XLS<sup>2</sup>

Outer Height: 230CM

Inner Height: 165CM

Adjustable Height: 180-240CM

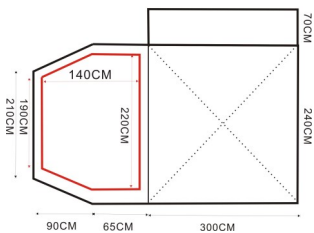

We highly recommend that you insure your drive away awning against storm damage or accidental damage, as the warranty does not cover such eventualities. The manufacturer IS NOT liable for any damage caused to the tent or its contents due to misuse, incorrect pitching or extreme weather (full warranty details on rear of booklet).

## NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

- Damage caused by incorrect maintenance of the product.
- Flaws in the fabric caused by excessive use.
- Imperfections and pulls in mesh doors due to wear and tear.
- Water ingress through fabric as a result of accelerated UV degradation due to long term pitch .
- Water ingress through seams caused by excessive abrasion of seams or taped seam.
- Broken zips caused by over tensioning, forcing or snagging.
- Over tensioned/stretched seams coming apart.
- Buckles subjected to undue force or abrasion.
- Lost/popped out eyelets.
- Broken holdalls.
- Pole breakages or tube punctures (where applicable).
- Collateral damage from a pole breakage.
- Condensation, (a natural occurrence, exacerbated by insufficient ventilation opening).
- Consequential damage/loss to property/belongings (either inside or outside of the product) or shortening of holidays.

Outdoor Revolution work very closely with our retail partners to manage all warranty repairs/issues:

Please contact your retailer immediately (even if purchased online) if you feel your Outdoor Revolution product has a genuine warranty issue. The retailer, in turn will raise the issue with ourselves and we will action; with the retailer, according to the nature of the claim.

#### **Returning Products**

Please ensure the product is clean and dry and as close to its original condition as possible before sending back for checking. Wet or dirty products will not be accepted back for checking/warranty claims.

It is important to note that the Sales Contract between yourself and the retailer you purchased the Outdoor Revolution product from, remains valid throughout any warranty claim and your statutory rights are not affected.

## **IMPORTANT INFORMATION**

- ◆ Please do not leave for your holiday without fully erecting and checking that you have all the listed contents for your drive away awning. If you are missing anything, then please contact your retailer immediately before use.
- ◆ Please note that man-made fabrics are prone to condensation, when the warm air and moisture within the drive away awning, comes into contact with the colder air on the outer material. This is a perfectly natural occurrence and should not be confused with leaking. Please ensure that all ventilation points remain open, whenever possible, to help combat condensation.
- ◆ We suggest that you pitch your drive away awning for some period before use, enabling it to undergo the 'weathering' process. Weathering sometimes requires a few uses of the tent, before it becomes fully effective. Seam sealant can be used to solve any persistent weeps; this process is completely natural. 'Weathering' is the process of allowing your tent to become soaked, then completely dry, approximately two to three times, to reinforce the waterproofing of the seams/stitching on the fabric.
- ◆ Please ensure that you site the drive away awning on clear level ground before erecting, with no sharp objects beneath and zips fully enclosed. We suggest placing a groundsheet underneath the tent to keep it dry/clean.
- ◆ We recommend conducting a trial run of your drive away awning to familiarise yourself with the assembly and usability of the tent. If you have any issues in relation to pitching your tent; please contact your dealer for assistance, before going on holiday.
- ◆ Please note that this model is designed for 'touring' use and not seasonal pitch.
- ◆ Always dry/air the drive away awning after use, before packing away, to prevent mildew or mould from developing.
- ◆ Any dirt or stains can be removed by brushing, or gently washing, using warm water. DO NOT use detergents, as this will destroy the waterproofing of the materials.
- ◆ DO NOT cook or smoke inside this drive away awning; despite the outer fabric being flame-retardant, it will still melt.
- ◆ In the event of damage; please contact your retailer. If, for whatever reason, you are unable to contact them, then please email: [cs@blue-diamond-products.co.uk](mailto:cs@blue-diamond-products.co.uk) and our dedicated customer service team will be happy to assist you.
- ◆ Please avoid using this drive away awning in temperatures below freezing, as this can result in cracking of the Oxygen Air Frame.
- ◆ DO NOT use bleach to clean your drive away awning under any circumstances.

## OPTIONAL ACCESSORIES

Air Pod Inner Tent - A freestanding single point inflation micro-polyester sleeping bedroom, designed to comfortably accommodate two average adults or a double airbed.

Snugrug—A thermal backed rug-style camping carpet, which covers your internal living space, for more comfortable footing.

Canopy Poles - A useful pair of steel poles that can be used to uphold the front door in an upright position.

Lumi-Link Tube Light Kit—A triple remote controlled dimmable roof strip light kit, which enable you to maintain a cosy evening ambience.

**A selection of coordinating pillow, folding chairs and furniture is also available to complement this product.**

⇒ Visit [www.outdoor-revolution.com](http://www.outdoor-revolution.com) for more information on the optional extras.

**12 Month Warranty Against Any Manufacturing Faults on Canvas/Workmanship.**

## OUTDOOR REVOLUTION GUARANTEE

Outdoor Revolution products are designed and produced to the very highest of manufacturing standards, using the best quality fabrics or components available for each specific model. Rigorous quality control of finished products is in place.

All manufactured products are:

- Quality controlled to be free from minor defects.
- Fit for the purpose that they are intended for.
- Manufactured to a satisfactory quality.

It is important that correct care is taken when opening , erecting, using, and just as importantly, packing away the product. Following these rules will keep your product in reliable working condition for many years. Failure to adhere to these simple guideline may cause unnecessary damage to the product (see formal instructions for handling/erection tips). A repair kit is included with each of our products to help resolve any minor issues.

### THE WARRANTY

The Outdoor Revolution Warranty lasts for twelve months from the original date of purchase; please keep all receipts or copies of any relevant transaction to substantiate the purchase date. This warranty only covers the workmanship, fabric and components. Any faults found within six months of purchase will be investigated by Outdoor Revolution. Faults found outside of the initial six months of purchase will need to be proven by you, the purchaser, in line with current consumer legislation, after the short term right to reject has concluded. **Please note that this warranty requires registration on our website.**

Retailer will not refund a purchase if no fault is found.

The manufacturers warranty does not cover the following:-

- General wear and tear over extended periods of use or, seasonal pitching of the product.
- Accelerated UV damage caused by excessive, long term sun exposure.
- Accidental damage caused by but not exclusive to, human, animal or weather.



## PACKING AWAY YOUR DRIVE AWAY AWNING

- ♦ Zip up any windows/doors before deflating.
- ♦ Unpeg all guylines, storm straps and most of the pegs around the drive away awning, leaving only the four corners pegged out.
- ♦ Open each 'Dynamic Speed Valve' in turn and push in the quick release button; please leave this button pressed in.
- ♦ Unpeg each of the four corners.



Allow the drive away awning to collapse on itself, compressing out of the canvas as possible.



Fold the drive away awning on itself vertically to form a rectangular shape.



Fold the drive away awning on itself to create a streamlined 'sausage' shape. Measure the width of the 'awning sausage' against the bag to ensure that it will fit inside. Begin rolling the model, compressing as you roll.

Rotate the rolled drive away awning onto the bag and pull the sides up around it, before zipping up the bag.



## PLEASE READ THE INSTRUCTIONS CAREFULLY

**TIP:** Refer to the photograph to help when pitching your **Turismo XLS<sup>2</sup>**.

1. Spread the canvas out on the ground, next to your vehicle, with the cowl side laying parallel to it.



2. Peg out the four corners of the flysheet to hold the awning in position whilst you assemble the poles.



3. Locate each of the three poles and erect them.



4. Thread each of the poles through the corresponding sleeves on the awning, which are found on the roof.

5. Thread the smaller pole through the sleeve on the annexe area, before inserting the pin from the 'Ring & Pin' into the bottom of the pole, at each end.



6. Insert the pin from the 'Ring and Pin' into the bottom of the pole, at each end of the longer remaining poles.



6. Clip any visible 'C' clips onto the designated sections of the three poles for reinforced stability.

7. You may need to reposition the pegging points now; peg the awning down using the 'Ring & Pin', before working your way around any remaining pegging points.



8. Make sure that you secure every guyline on the awning for maximum stability; these can be adjusted to make them even tighter.

9. Slide the awning piping through the awning channel, until the awning reaches the desired position on the vehicle. We recommend using a Drive Away Kit\* to simplify this process.




10. Climb into the drive away awning and peg down the groundsheet, starting with the four corners, before securing any additional points to maintain correct positioning.

11. Peg down the bottom of the cowl down using any adjustable pegging points, in order to prevent this from flapping around in the wind.



\*Note: Threading the cowl on/off the vehicle can prove quite difficult once the awning is in position; we recommend using a '**Drive-Away Kit**', which makes the attachment process much simpler. The images below demonstrate this:

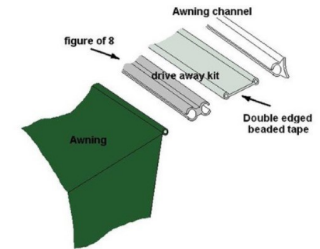

There is a video found on the '**Hints and Tips**' section of the '**Outdoor Revolution**' website, explaining how to use a '**Drive Away Kit**': [www.outdoor-revolution.com](http://www.outdoor-revolution.com)

Note: Alternatively, you could use a '**Magnetic Drive-Away Strip**' to attach this model to smaller, magnetic vehicles, as shown in the below image.

